

RANDY:

① COASTER'S 1st KIT
THE "SUPERSON" "1955"

② PRE-FAB OF THE "SUPERSON"
WE NEVER PUT IN KIT FORM.




SUPER-SON


COASTERS

KIT Nº 300




REAL
ROCKET
POWER

SUPER-SON

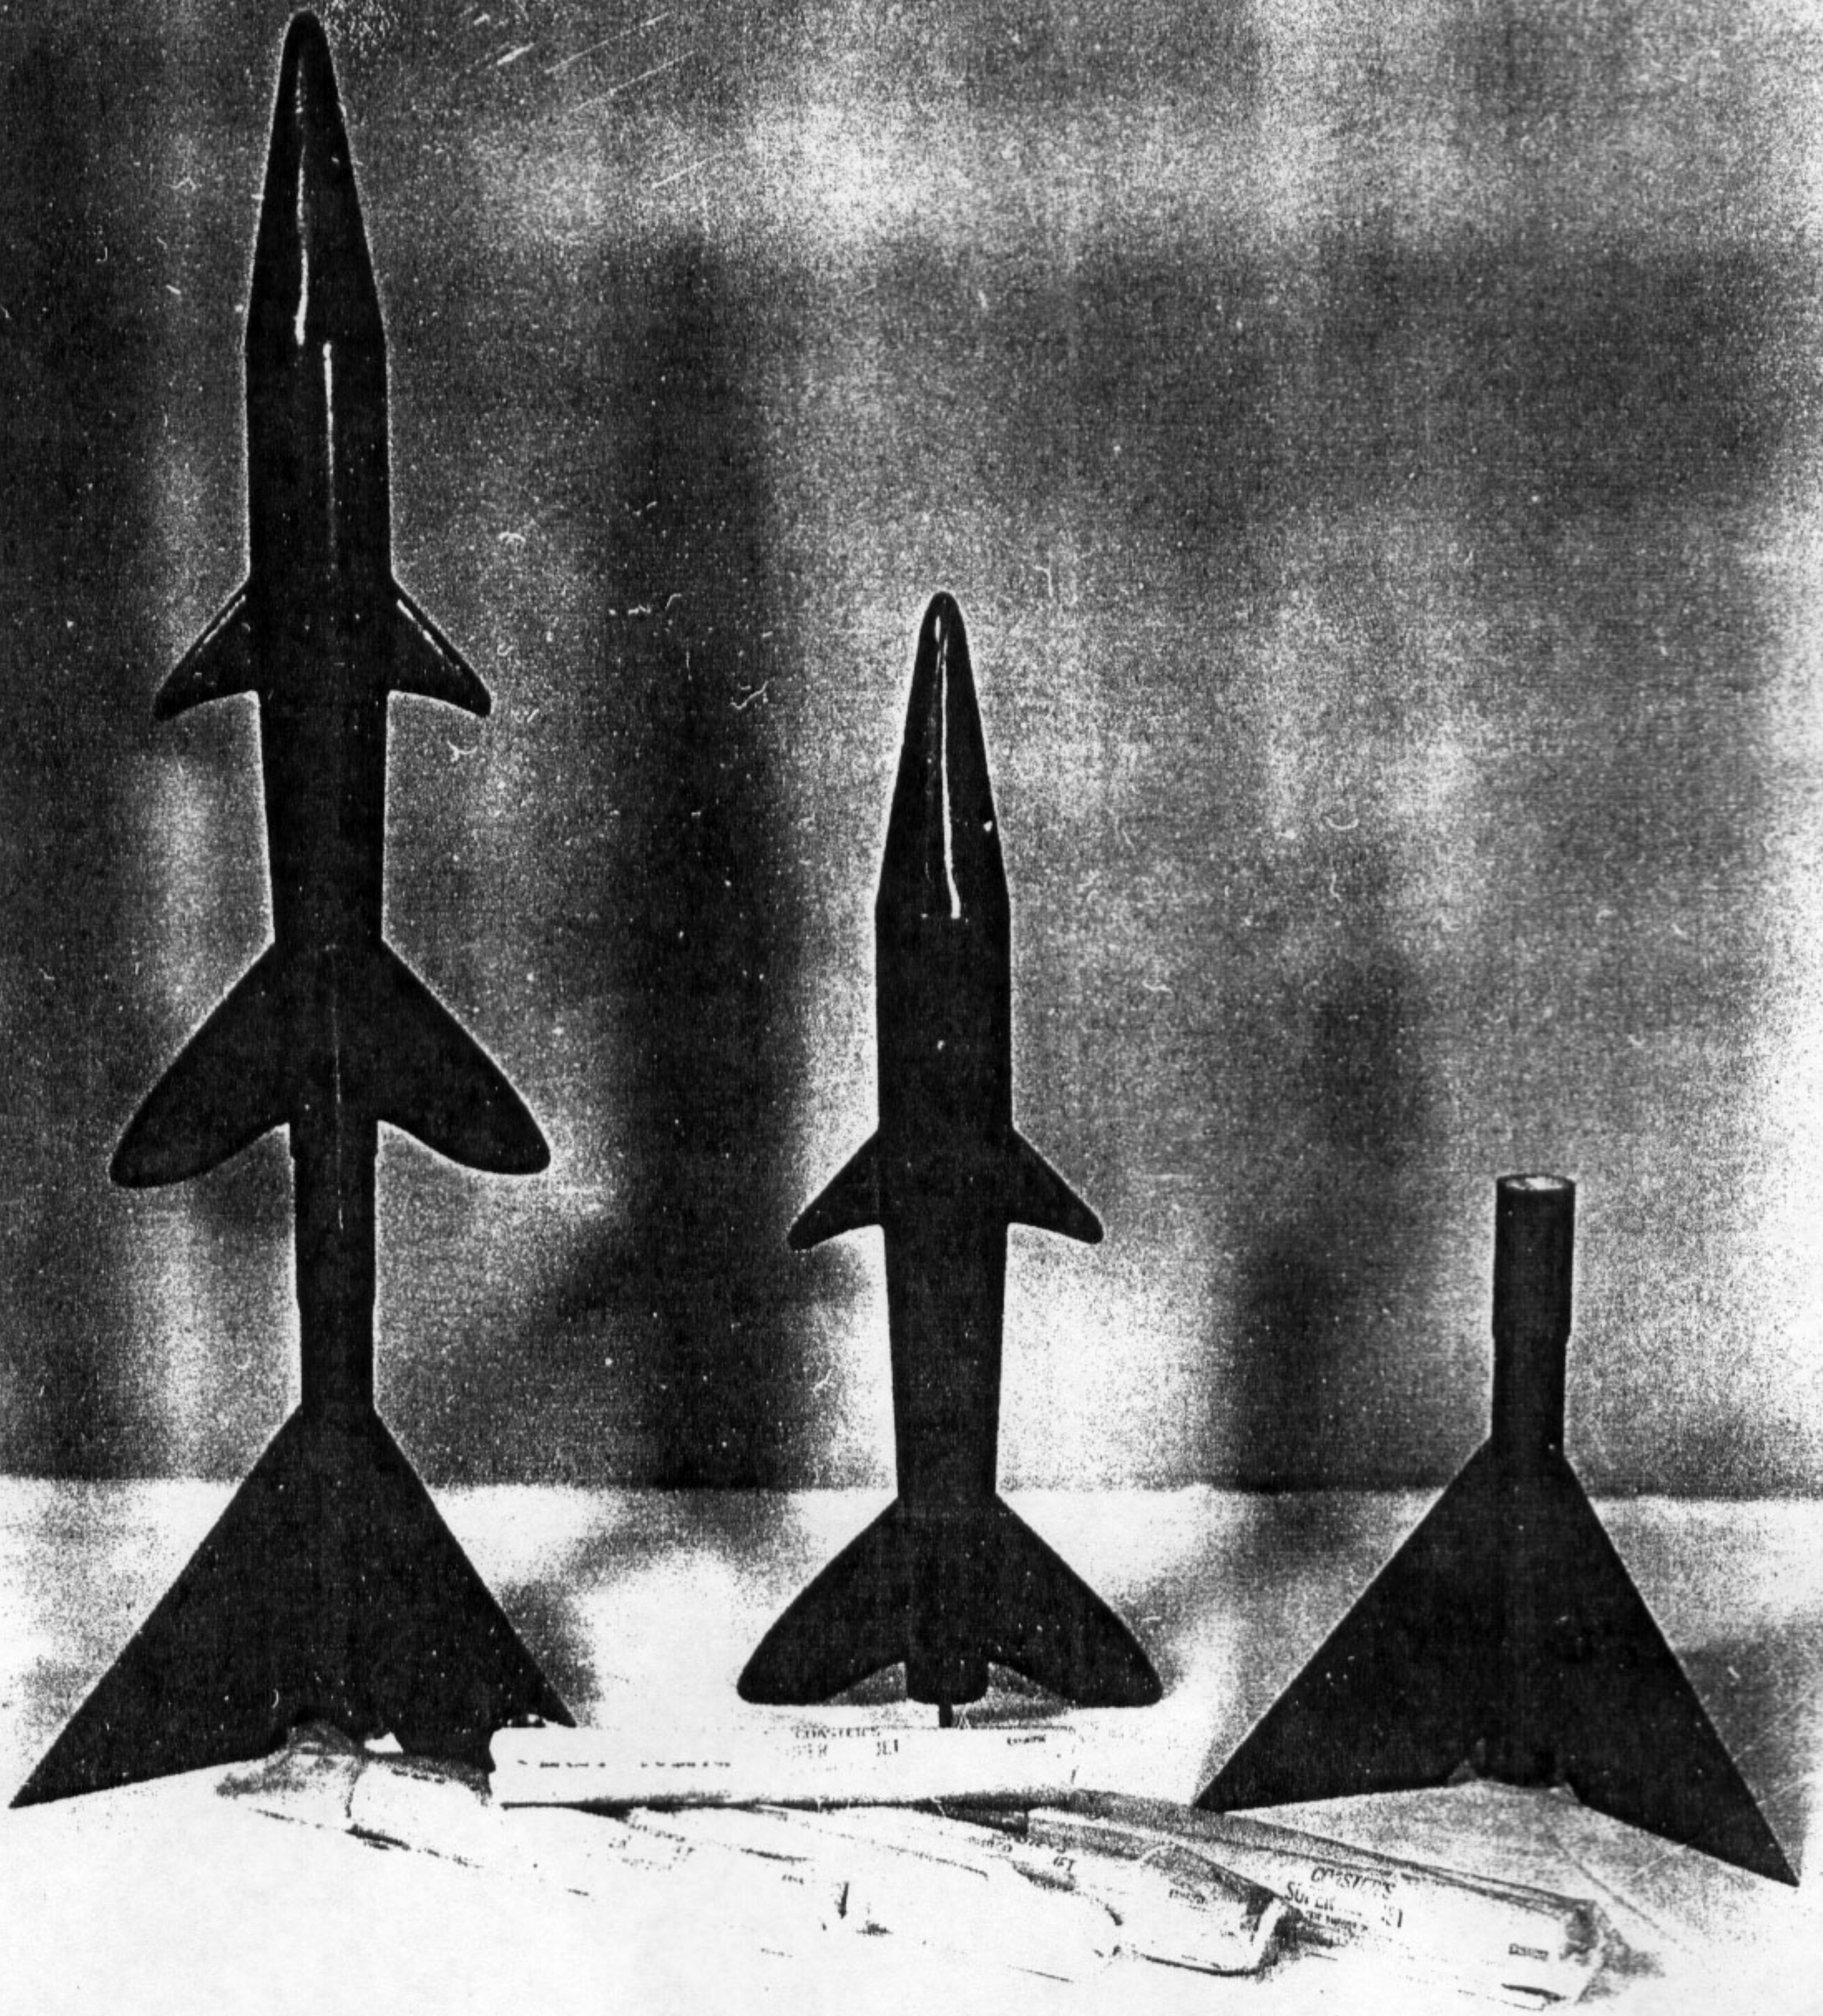

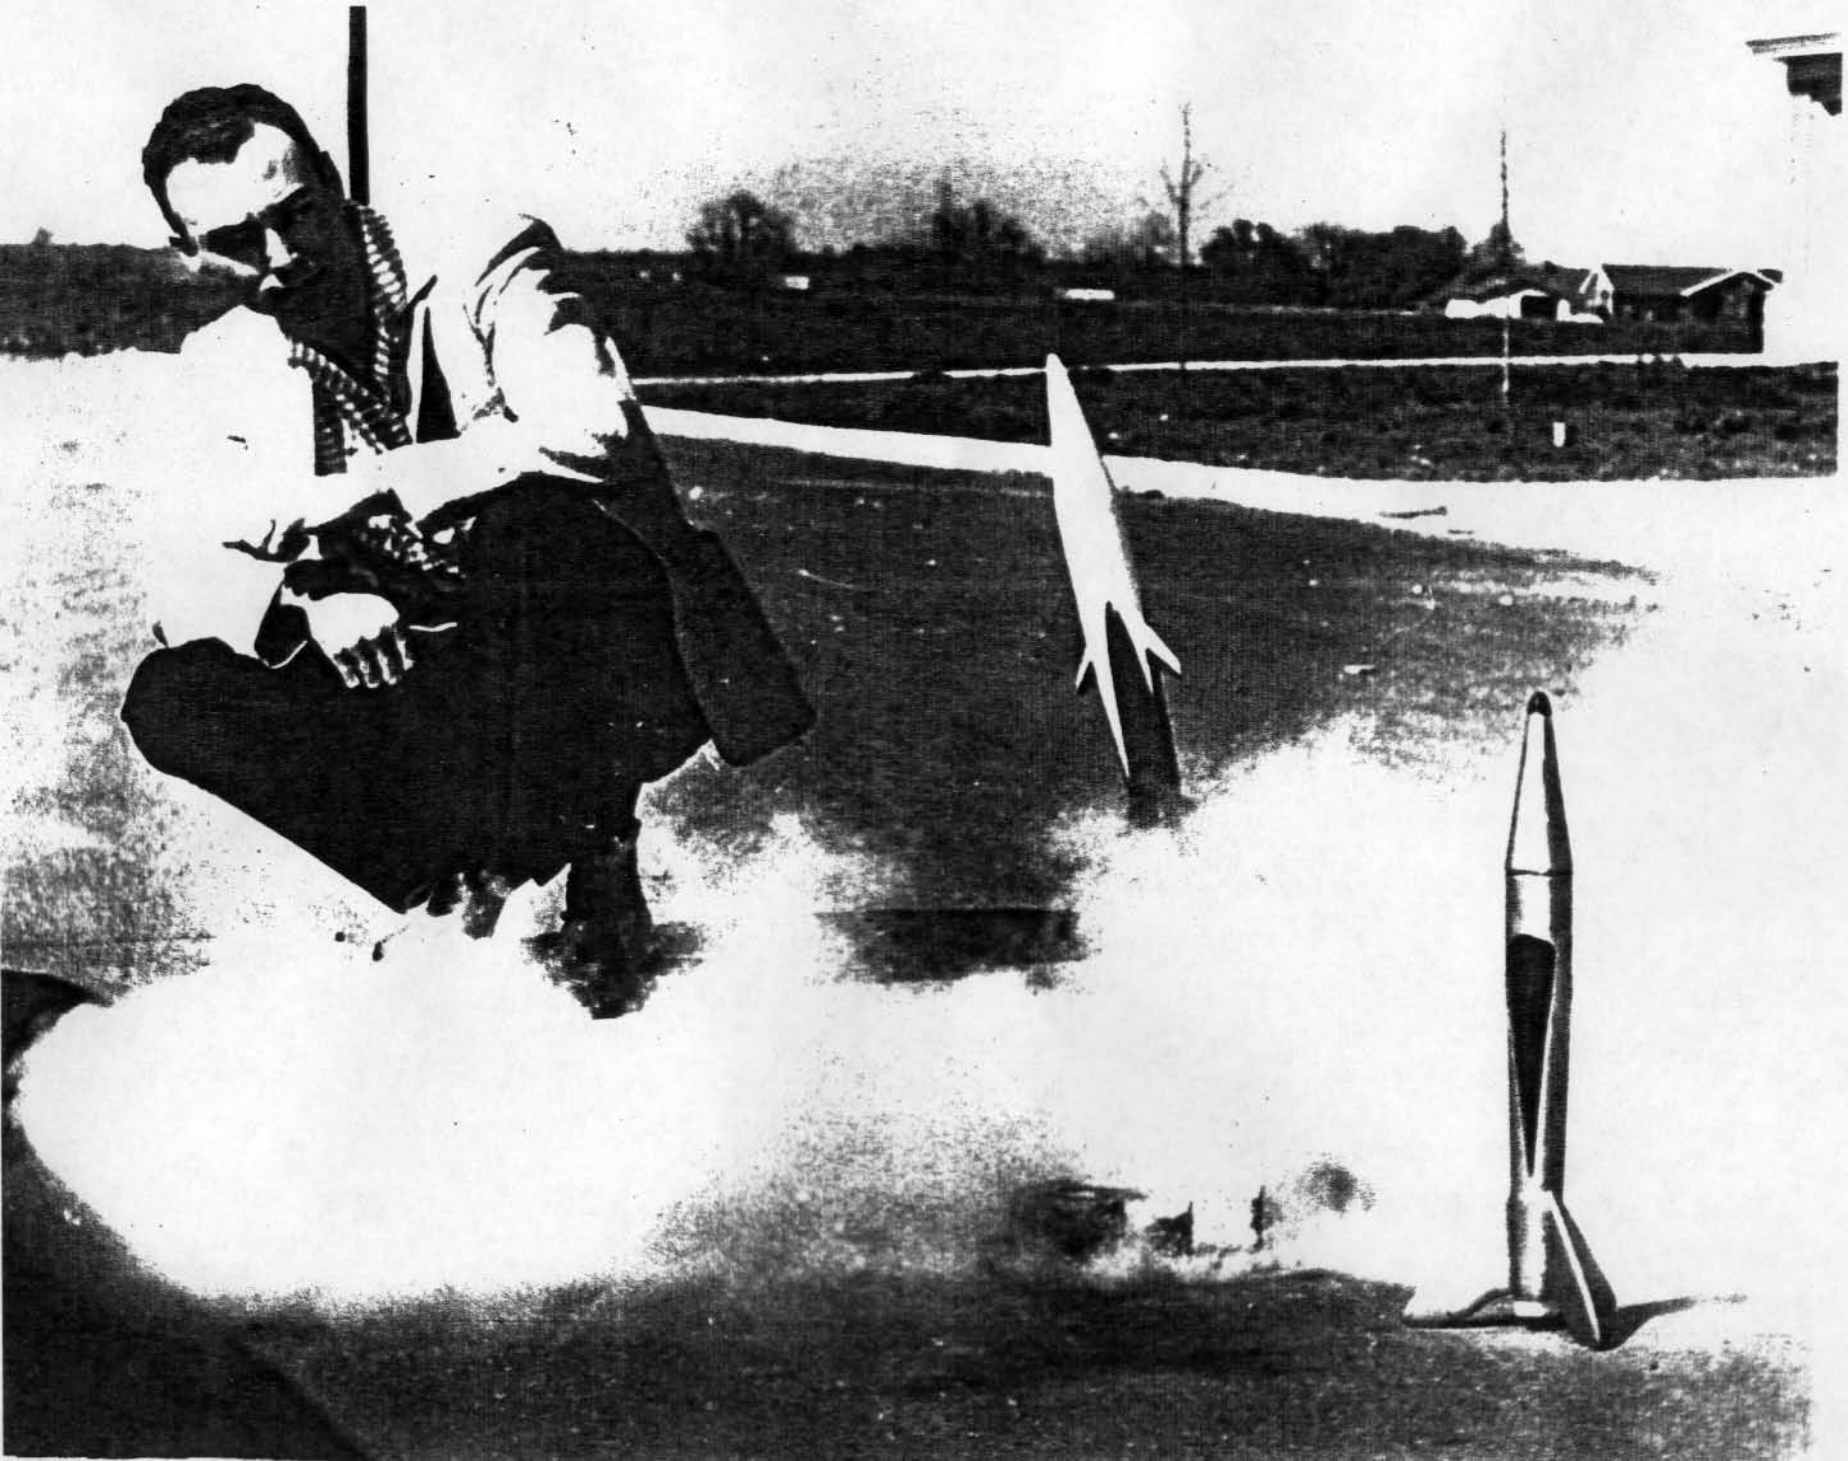

THE PRE-FABRICATED SUPE

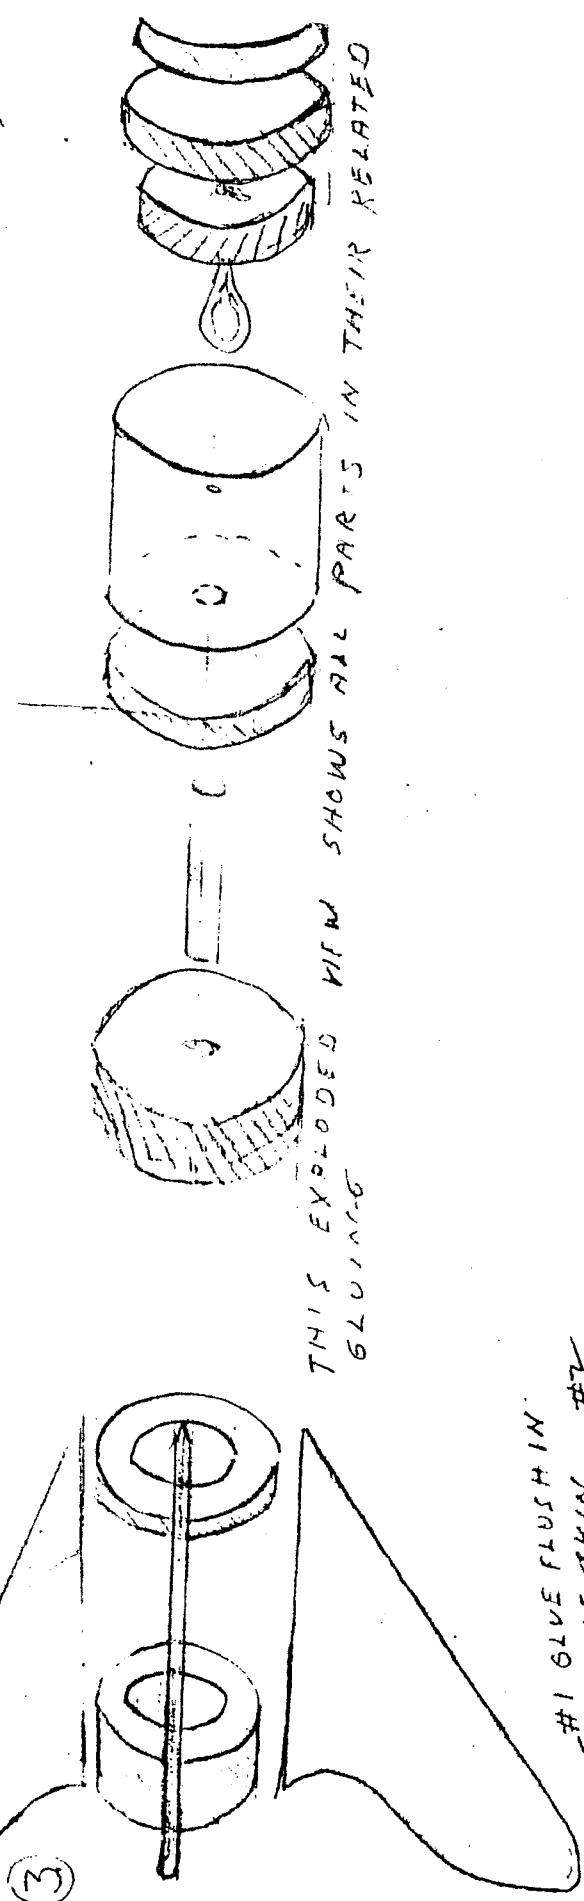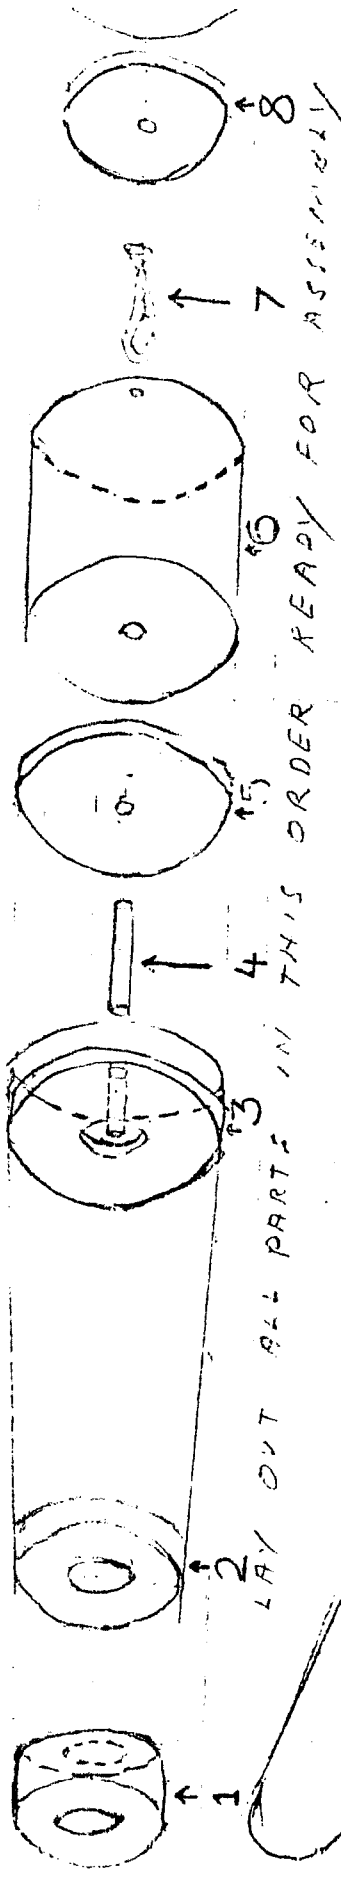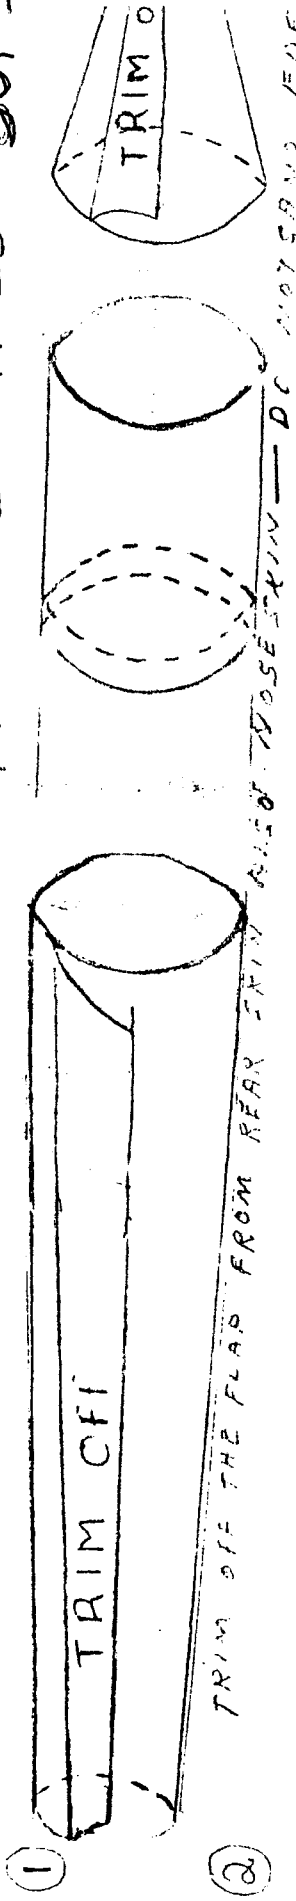



#1 GLOVE FLUSH IN
END OF SKIN





5 UNTIL PARTS ARE WELDED


45 degree cone
cut
95

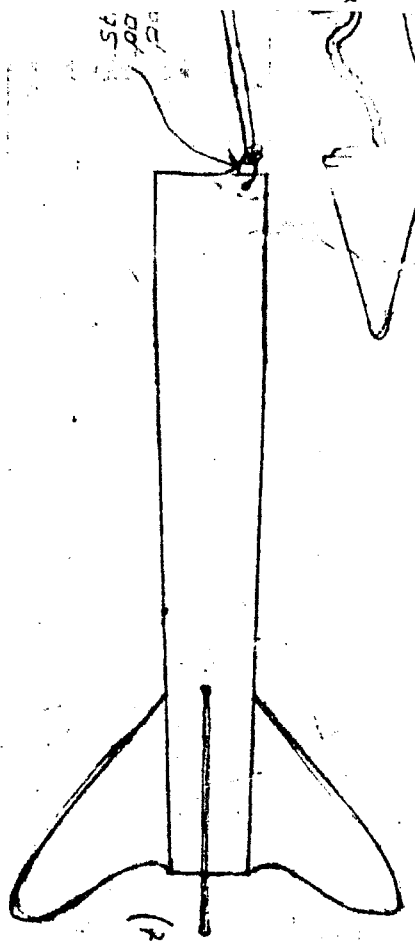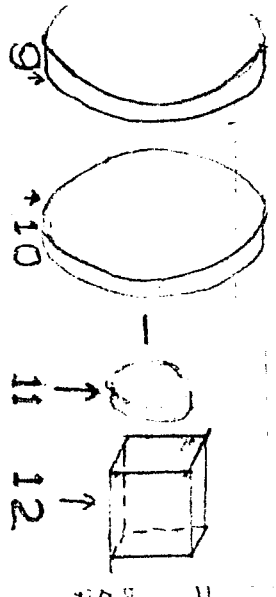

6

(finished rocket)


FINISH and PAINT
as DESIRED

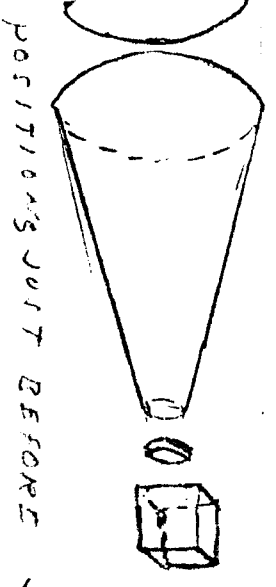

the parts of the rocket are joined together

Trigger Tube


Give fins firmly to tail of
just large 1/20" apart

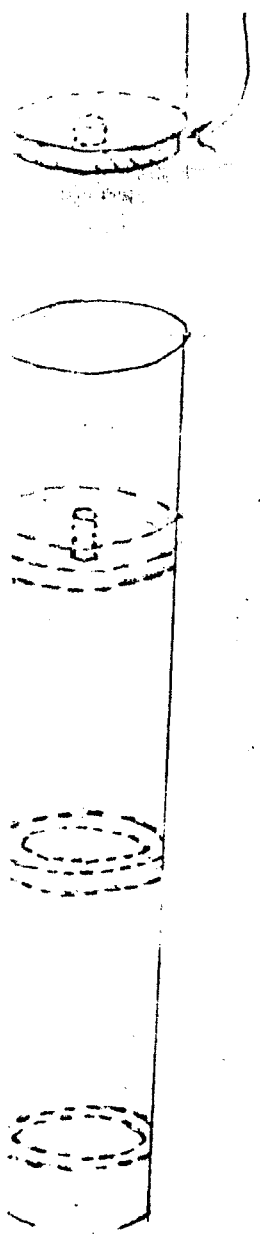


5

4


THE PRE-FABRICATED SUPERSON

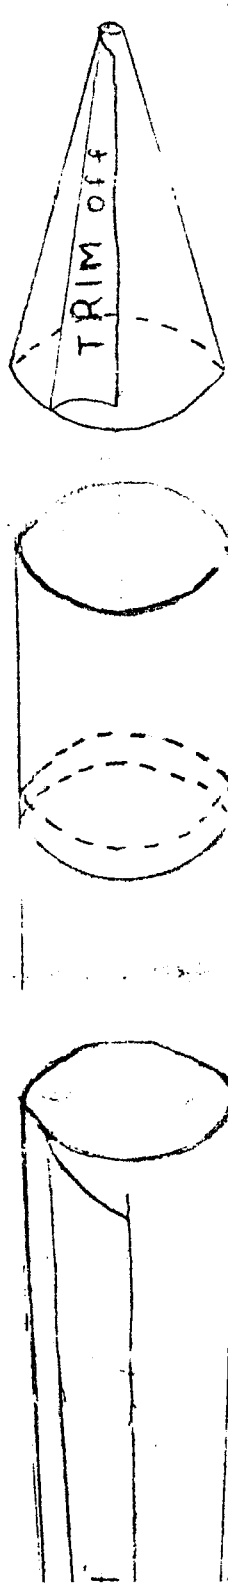


FLAP FROM REAR SKIN ALSO MOSEY IN — DC NOZES AND EDGES UNTIL PARTS ARE WITH

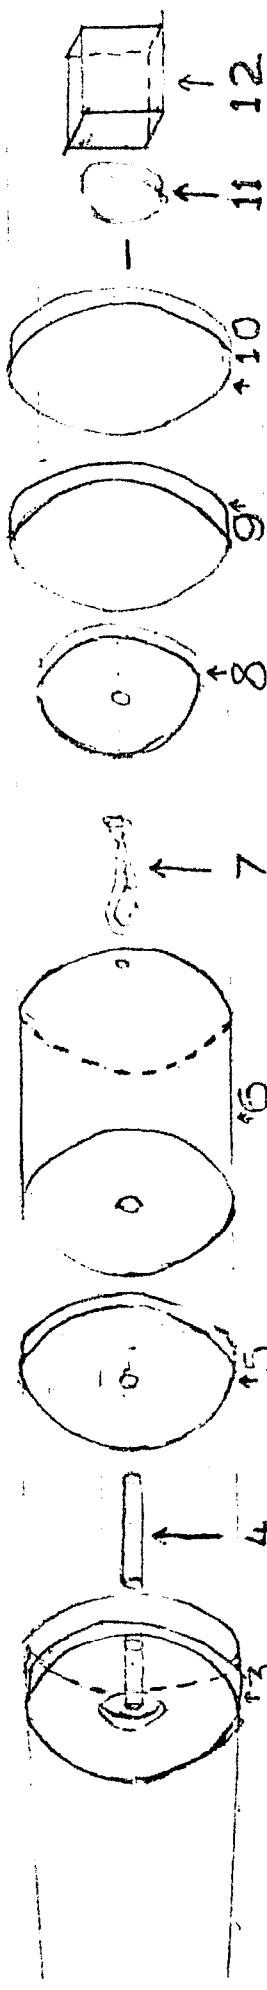

ALL PARTS IN THIS ORDER READY FOR ASSEMBLY

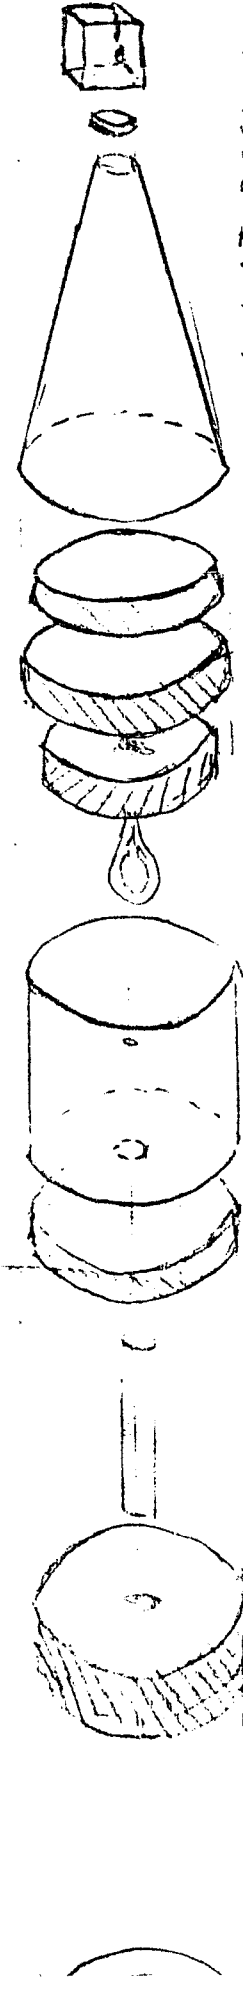


THIS EXPLODED VIEW SHOWS ALL PARTS IN THEIR RELATED POSITIONS JUST BEFORE GLUING

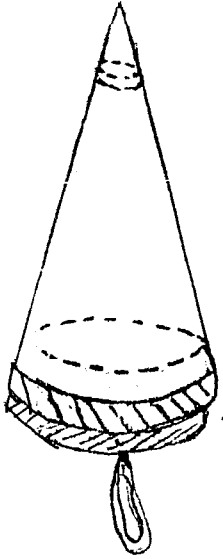


#8 on nose cone should fit friction tight into parachute chamber

Insert trigger tube after final assembly - put glue on each end of tube also to each hole it fits in - Install by pushing it through from inside the parachute chamber

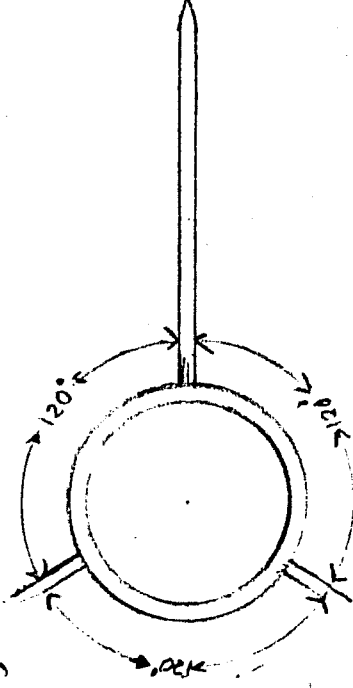

Glue into top of rear section of fuselage

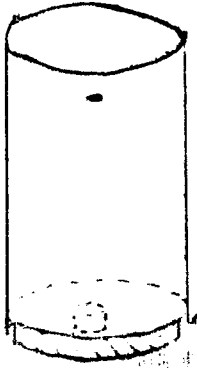


push all the way except 1/4" strip

Trigger Tube

Give fins firmly to tail of fuselage 120° apart

Steel wire attaches parachute to hole in Parachute Chamber

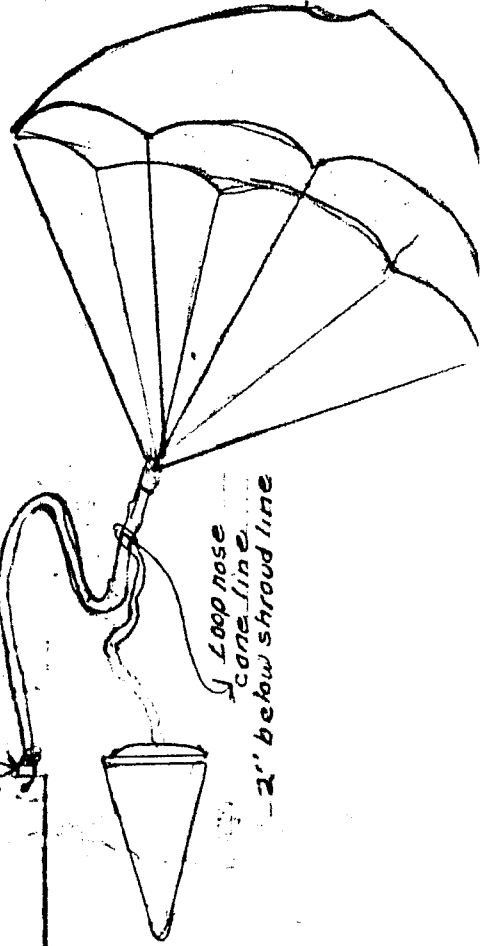

Loop nose cane line - 2' below shroud line

VISH and PAINT DESIRED