


Sirus Measurements

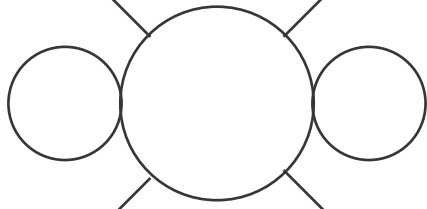

Notes:

1. Overlap depends in part on depth of nosecones- need sufficient crossover for the gas flow cutouts, about 1-2cm
2. Top and bottom nosecones can be same shape, just looks better with longer ones on top.
3. Same applies to internal nosecones.
4. 14mm tubes are full 450mm tubes.

